

ANCHORLIFT

DIRECT


Remote Control #92004

UP:
Press and hold to run windlass up. Windlass stop when the button is released.

DOWN: Autodrop
One short push the windlass starts and runs out for 40sec (approx 25m) and then stops after 40sec. To stop the windlass before 40sec push button again.

UP / PORT:
Press and hold to run windlass / thruster port - up. Windlass / thruster stop when the button is released.

IN / STARBOARD
Press and hold to run windlass / thruster stb - down. Windlass / thruster stop when the button is released.

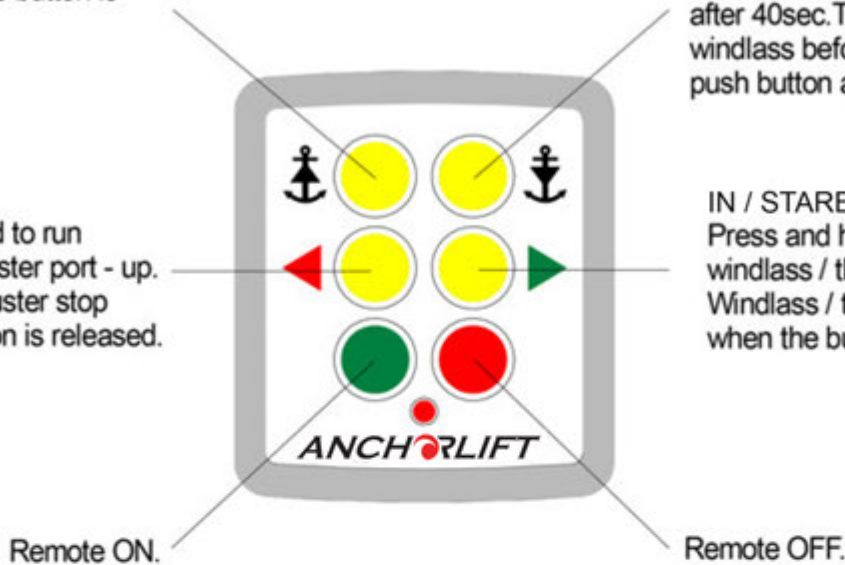

Typical wiring helm switch + radio remote 92004

